

COM-3005 CELLULAR BAND [800 – 1000 MHz] RECEIVER


Key Features

- Cellular band [800 1000 MHz] receiver.
- Sensitivity: -56 dBm RF input for full scale 10-bit output samples.
- Built-in RF AGC, 70 dB dynamic range.
- Low phase-noise frequency synthesizer can be tuned over entire range by steps of 100, 31.25 or 25 KHz.
- 8 preset frequencies for fast (<2ms) local oscillator frequency tuning.
- Selectable internal / external 10 MHz frequency reference for the frequency synthesizer.
- Dual 10-bit Analog-to-Digital converters, 40 Msamples/s.
- Two baseband filtering options:
 - Narrow-band applications (<300 KHz)
 - Wideband applications (< 20 MHz).
- SMA connectors. Single 5V supply. Connectorized 3"x 3" module for ease of prototyping.

For the latest data sheet, please refer to the **ComBlock** web site: <u>www.comblock.com/download/com3005.pdf</u>. These specifications are subject to change without notice.

For an up-to-date list of **ComBlock** modules, please refer to <u>www.comblock.com/product_list.htm</u>.

Block Diagram

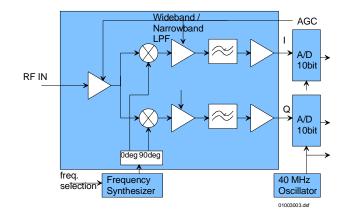



(shown without shield)

Electrical Interface

Inputs / Outputs

Inputs	Definition
RF IN	800 - 1000 MHz.
Id _II (J3 SMA male connector. 50 Ohm
	impedance.
	Receiver sensitivity: -56 dBm at
	RF input for full scale signal at A/D converter
	A/D converter.
	Maximum input (operating):
	-5 dBm
	Maximum input (no damage): +10 dBm
	42111
EXT_REF_CLK	AGC range: 70 dB.
EAI_KEF_CLK	External 10 MHz frequency
	reference for frequency synthesis.
	Sinewave, clipped sinewave or
	squarewave.
	Minimum level 0.5Vpp.
	Maximum level: 3.3Vpp.
Disital Ostarat	J7 SMA male connector.
Digital Output Signals	Definition
DATA_I_OUT[9:0]	In phase beschond signal
DATA_1_001[9.0]	In-phase baseband signal. 10-bit digital samples.
	U 1
DATA_Q_OUT[9:0]	40 Msamples/s. Unsigned.
$DATA_Q_001[9.0]$	Quadrature baseband signal.
	10-bit digital samples.
CLK_OUT	40 Msamples/s. Unsigned.
CLK_001	Digital clock. 40 Msamples/s.
	Read the samples at the rising edge of CLK_OUT.
ADC_CLK_OUT	
AGC_IN	Same as CLK_OUT.
AGC_IN	Input signal to control the analog gain prior to A/D conversion. Can
	gain prior to A/D conversion. Can
	be digital (pulse-width modulated) or analog.
	or analog.
	The purpose is to use the maximum
	dynamic range while preventing
	saturation at the A/D converter. 0 is
	the maximum gain, $+3V$ is the
	minimum gain.
	Without any subsequent module,
	the COM-3005's gain is set at its
	maximum and may thus saturate.
	ind may thus saturate.
Control Lines	Definition
PLL_STROBE	Low-voltage (3.3V / 0V) TTL
_	input control.
	Used to increment the modulo- N_{freq}
	frequency pointer (where N_{freq} is
	defined in Register 35) in a round-
	robin sequence.
L	

	Rising edge triggered.
	Minimum pulse width: 10 µsec.
	Connector J6 Pin A3.
Serial Monitoring	DB9 connector.
& Control	115 Kbaud/s. 8-bit, no parity, one
	stop bit. No flow control.
Power Interface	4.9 – 5.25VDC. Terminal block.
	Power consumption is 250mA typ.
Important: digital I/O signals are 0-3.3V	

LVTTL. Inputs are NOT 5V tolerant!

Configuration

Complete assemblies can be monitored and controlled centrally over a single asynchronous serial connection or, when available through adjacent ComBlocks, LAN/TCP-IP, USB, or CardBus connection.

The module configuration is stored in non-volatile memory.

Configuration (Basic)

The easiest way to configure the COM-3005 is to use the ComBlock Control Center software supplied with the module(s). After detecting the ComBlock modules (2nd button from left), highlight the COM-3005 module to be configured. Then press the settings button (3rd button from the left).

Up to eight frequencies can be stored within each module at any given time. The current frequency is selected by an index in the range 0 to 7. Frequencies must be integer multiples of the RF synthesizer step size.

A basic frequency hopping scheme can be enabled by

- (a) enabling the external trigger
- (b) entering the number of frequency hopping steps in the round-robin arrangement.

For example, by specifying 4 steps, the receiver center frequency will follow the following index sequence: 0,1,2,3,0,1,2,3,0,1, etc., the index being incremented at the rising edge of each external PLL_STROBE pulse.

<mark>.</mark> Cor	ComBlock Control Center			
File C	File Operations Functions Help			
<u>×</u>	A 🗗 🌆 🛯 🔛 🏛 🚇			
	/3005 Cellular band [800 - 1000 MHz] receiv			
	COM3005 Cellular band [800 - 1000 MHz] receiver Basic Se			
	COMSOUS CERTIAL DAILY [000 - 1000 MHZ] receiver basic se			
	Frequency Selection:			
	Frequency 0: 800000000 Hz			
	Frequency 1: Hz			
	Frequency 2: Hz			
	Frequency 3: 0 Hz			
	Frequency 4: 0 Hz			
	Frequency 5: 0 Hz			
	Frequency 6: 0 Hz Frequency 7: 0 Hz			
	Step Size: 100 KHz			
	T 10 MHz External Frequency Reference			
	External Trigger			
	Apply Ok Advan Cancel			

Configuration (Advanced)

Alternatively, users can access the full set of configuration features by specifying 8-bit control registers as listed below. These control registers can be set manually through the ComBlock Control Center or by software using the ComBlock API (see www.comblock.com/download/M&C_reference.pdf)

All control registers are read/write.

Undefined control registers or register bits are for backward software compatibility and/or future use. They are ignored in the current firmware version. Programmers developing custom applications (using the <u>ComBlock API</u> instead of the supplied ComBlock control center graphical user interface) should know that frequency changes are enacted upon (re-)writing to the last register (REG35).

Parameters	Configuration
RF frequency 0	Preselected frequency 0.
	Valid range 800 MHz – 1000
	MHz, steps of 25, 31.25 or 100
	KHz. Expressed in Hz.
	REG0: bit 7:0 (LSB)
	REG1: bit 15:8
	REG2: bit 23:16
	REG3: bit 31:24 (MSB)
External/Internal RF	0 = internal
synthesizer frequency	1 = external.
reference	REG4 bit 0
External controls	Enable or disable the
enabled/disabled	PLL STROBE external control
	on the J6 connector.
	0 = external control disabled
	1 = external control enabled
	REG6: bit 1
Step size selection	Chose between 100, 31.25 or 25
	KHz step size.
	00 = 100 KHz step
	01 = 31.25 KHz step
	10 = 25 KHz step
	REG6 bits 4-3.
Frequency selection	Use to switch local oscillator
	frequency among preselected
	values.
	Range 0 through 7
	REG6 bits 7-5.
RF frequency 1	Preselected frequency 1.
	Same format as RF frequency 0.
	REG7: bit 7:0 (LSB)
	REG8: bit 15:8
	REG9: bit 23:16
	REG10: bit 31:24 (MSB)
RF frequency 2	Preselected frequency 2.
	Same format as RF frequency 0.
	REG11: bit 7:0 (LSB)
	REG12: bit 15:8
	REG13: bit 23:16
	REG14: bit 31:24 (MSB)
RF frequency 3	Preselected frequency 3.
	Same format as RF frequency 0.
	REG15: bit 7:0 (LSB)
	REG16: bit 15:8
	REG17: bit 23:16
	REG18: bit 31:24 (MSB)

RF frequency 4	Preselected frequency 4.
	Same format as RF frequency 0.
	REG19: bit 7:0 (LSB)
	REG20: bit 15:8
	REG21: bit 23:16
	REG22: bit 31:24 (MSB)
RF frequency 5	Preselected frequency 5.
	Same format as RF frequency 0.
	REG23: bit 7:0 (LSB)
	REG24: bit 15:8
	REG25: bit 23:16
	REG26: bit 31:24 (MSB)
RF frequency 6	Preselected frequency 6.
	Same format as RF frequency 0.
	REG27: bit 7:0 (LSB)
	REG28: bit 15:8
	REG29: bit 23:16
	REG30: bit 31:24 (MSB)
RF frequency 7	Preselected frequency 7.
	Same format as RF frequency 0.
	REG31: bit 7:0 (LSB)
	REG32: bit 15:8
	REG33: bit 23:16
	REG34: bit 31:24 (MSB)
Number of RF	Each time a PLL_STROBE pulse
frequencies N _{freq} in	is received, the frequency pointer
the scanning list	increments modulo N _{freq} .
	N_{freq} is in the range $1 - 8$.
	REG35: bit 7:0.

Note: Fine frequency tuning (down to Hz precision) is typically implemented digitally at the demodulator. See demodulators specifications (COM-1001, COM-1011/1018, COM-1027, COM-1008 etc) for details.

Monitoring

Parameters	Monitoring
Option o /	Returns '3005ov' when prompted for
Version v	the option and version number.

Operations

Internal vs External frequency reference for frequency synthesizer

The L-band local oscillator frequency generated by the frequency synthesizer is frequency-locked onto a 10 MHz reference clock. The source of this 10 MHz reference clock (internal versus external) is user-selected by software commands.

In order to use the external frequency reference, connect a 10 MHz sinewave, clipped sinewave or square wave to the SMA connector J7. Then select external frequency reference by software command from the ComBlock control center.

In order to use the internal frequency reference, either physically disconnect the external 10 MHz signal at SMA connector J7, or place the external input signal in high impedance mode. Then select internal frequency reference by software command from the ComBlock control center.

Test Points

Test points are provided for easy access by an oscilloscope probe.

Test Point	Definition
TP1	Baseband signal, I-channel, at A/D
	converter input. The nominal amplitude is
	1Vpp when the AGC loop is closed with
	the following demodulator (COM-1001,
	COM-1011/1018, COM-1027, COM-1008
	or equivalent).
TP2	Baseband signal, Q-channel, at A/D
	converter input. Nominal amplitude is
	1Vpp when the AGC loop is closed.
PLL_LOCK	Frequency synthesizer PLL lock status.
	Active low: '0' when locked.
	Note: do not connect any long test cable to
	this test point as it may inject noise into the
	RF PLL.
PLL_REF	Reference clock (10 MHz external or 20
	MHz internal)

Performance


Internal Clock Reference

The internal crystal performance is as follows:

- tolerance: \pm 75 ppm max @25C
- temperature stability (-10C to +60C): ± 50 ppm max
- aging: ±5ppm/year max @25C


Low Pass Filter

Each A/D converter is preceeded by a 4th order elliptic low-pass filter. The 3 dB cutoff frequency for model COM-3005-B (wideband applications) is 20 MHz.

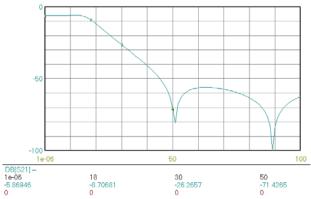

COM-3005-B baseband low-pass filter frequency response. Span 100 MHz, 10dB/div.

The 3 dB cutoff frequency for model COM-3005-A (narrow band applications) is 265 KHz. In-band ripple within +/- 150 KHz is less than +/- 0.1 dB.

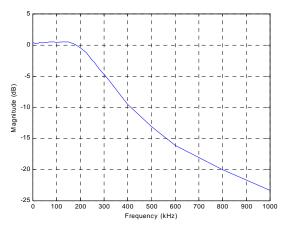

COM-3005-A baseband low-pass filter frequency response. Span 1 MHz, 5dB/div.


Phase noise

Typical phase noise performances are: -50 dBc @100 Hz away from the carrier -65 dBc @1 KHz -75 dBc @10 KHz -100 dBc @ 100 KHz

Spectral spurious lines are at -65 dBc or lower, with the exception of two spectral lines at +/-100 KHz (-55 dBc).

LO frequency switching time: <2 ms


Mechanical Interface

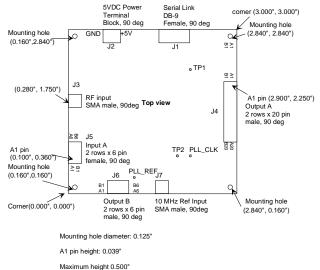

Pinout

Serial Link J1


The DB-9 connector is wired as data circuit terminating equipment (DCE). Connection to a PC is over a straight-through cable. No null modem or gender changer is required.



2 Transmit 3 Receive 5 Ground


Input Connector J5

12-pin (2 rows x 6) 2mm female connector.

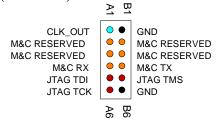


Output Connector J4

40-pin (2 rows x 20) 2mm male connector.

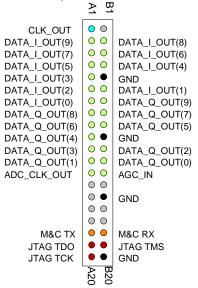

Connector J6

12-pin (2 rows x 6) 2mm male connector.

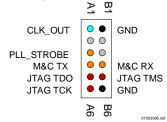

I/O Compatibility List

(not an exhaustive list)

Input	Output
	<u>COM-1001</u>
	BPSK/QPSK/OQPSK
	demodulator
	COM-1011/1018 Direct-
	sequence spread-spectrum
	demodulator
	<u>COM-1027</u>
	FSK/MSK/GFSK/GMSK
	demodulator
	COM-1008 Variable
	decimation
	COM-8002 High-speed
	data acquisition. 256MB,
	1Gbit/s, 50 Msamples/s.
	<u>COM-2001</u> Dual D/A
	converter (baseband)

Configuration Management

This specification is to be used in conjunction with Atmel microcontroller software revision A.

ComBlock Ordering Information

- COM-3005-A Cellular band [800 1000 MHz] Receiver. Narrow-band Applications.
- COM-3005-B Cellular band [800 1000 MHz] Receiver. Wideband Applications.

MSS • 18221 Flower Hill Way #A • Gaithersburg, Maryland 20879 • U.S.A. Telephone: (240) 631-1111 Facsimile: (240) 631-1676 E-mail: sales@comblock.com